
INSTRUCTION SHEET #324739


Locking Speed Rail Cover


ASSEMBLY INSTRUCTIONS

CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE. **SAVE YOUR BOX AND ALL PACKING MATERIALS.** YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

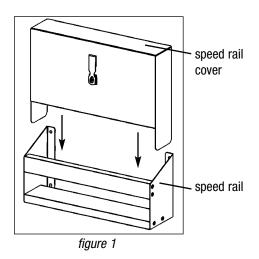

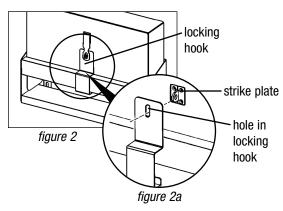

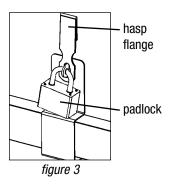

Parts List	
description	part #
locking hook	

1) Cover

Place speed rail cover down into the speed rail, as shown in *figure 1*. Parts should fit into each other smoothly with some clearance.

2) Locking Hook

Take the locking hook and place it as shown in *figure 2*, aligning the hole in the locking hook with the strike plate as shown in *figure 2a*.

3) Padlock

Once the locking hook and speed rail cover are in place, pull the hasp flange down over the strike plate. Once the parts are aligned, slip the padlock thru the hole in the strike plate, and lock as shown in *figure 3*.

Note: Single speed rail shown. For double speed rails, repeat Steps 1 through 3.

EG9884 Revised 09/23



- 100 Industrial Boulevard, Clayton, Delaware 19938-8903 U.S.A.
- Phone: 302/653-3000 800/441-8440
- Fax: 302/653-2065 www.eaglegrp.com