

# Benchside Tote Box Carrier

## ASSEMBLY INSTRUCTIONS

### CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE.  
**SAVE YOUR BOX AND ALL PACKING MATERIALS.**  
YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

Thank you for your purchase. Before assembly, read this instruction sheet carefully to ensure correct use. After reading, be sure to store this instruction sheet in a safe place, should it be needed for future reference.

### Parts List

qty	part #	description
1	*	angled wire shelf**
1	*	wire undershelf**
1	*	3-sided truss frame
1	*	truss
2	CP24-Z	24" post
2	CP33-Z	33" post
4	A200019	donut bumper
2	A204147	caster
2	A204148	caster with brake

\* Varies per order


\*\* Comes with set of 4 split sleeves

### Step 1 - Assemble donut bumper and caster onto bottom end of each post.

Bottom is end with hole for caster stem.


*IMPORTANT NOTE: Install the casters with brake to the smaller 24" posts.*

- Slide donut bumper onto end of post.
- Drive in caster, using a hammer or mallet. Several solid blows are usually required.

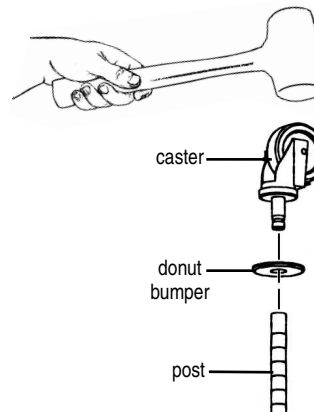

### Step 2 - Attach split sleeves (for undershelf) to groove second from the bottom on each post.

- The wider part of the taper goes toward the bottom.
- Make sure rib on split sleeve is seated into a groove on the post.

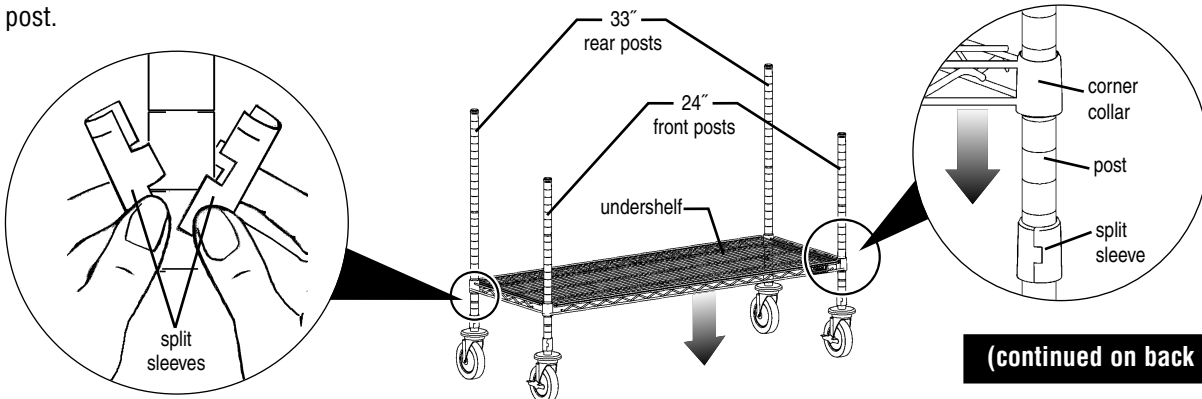

### Step 3 - Mount undershelf.

NOTE: The 24" front posts (each with caster with brake) will indicate the front of the unit.

(continued on back page)



EG9941 Revised 07/18

# Benchside Tote Box Carrier

## ASSEMBLY INSTRUCTIONS


### Step 4 - Attach split sleeves for 3-sided truss frame.

- On 24" front posts, attach split sleeves to the top groove.
- On 33" rear posts, attach split sleeves to groove #22.

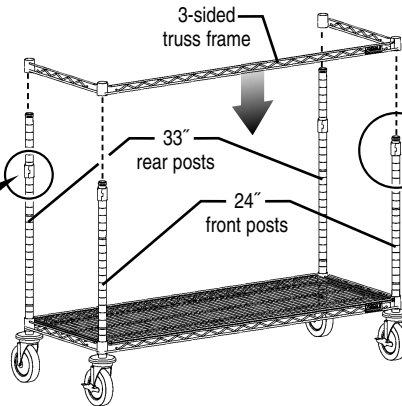
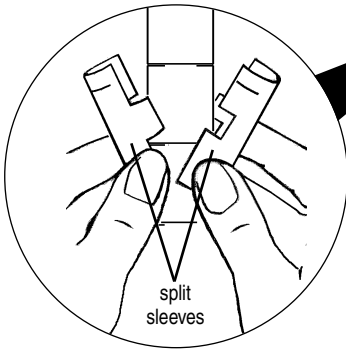


### Step 5 - Mount 3-sided truss frame.

**IMPORTANT NOTE:** The open side of 3-sided truss frame goes to the rear of the unit.

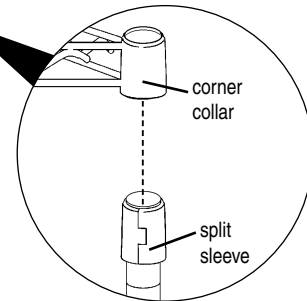

### Step 6 - Attach split sleeves (for top truss) to rear posts, then lower top truss onto split sleeves.

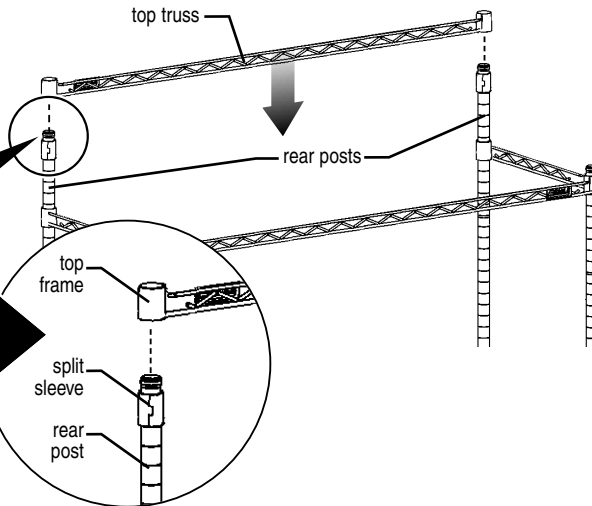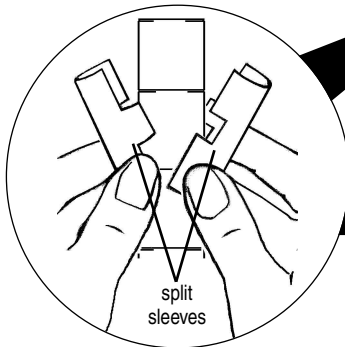

### Step 7 - Lay angled wire shelf onto top truss and 3-sided truss frame.

Make sure the 3" upturn is at the front of unit.

Assembly is complete.

