INSTRUCTION SHEET #318608

Knock-Down Bun Pan Racks

ASSEMBLY INSTRUCTIONS

CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE. **SAVE YOUR BOX AND ALL PACKING MATERIALS.** YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

Step 1 Choose a level area for assembly.

Step 2 Lay out parts: (4) 3/4" x 1" I-Beam Spacers

(2) 1" x 1-1/2" Angle Spacers

(8) Pieces of 1" Channel, 1"-Long

(2) Pre-Assembled Rack Sides

(8) 3/8" x 2" Hex Bolts


(4) 1/4" x 1/2" Carriage Bolts & Nuts

Step 3 Attach all bar and angle spacers to pre-assembled rack side (*Do not overtighten bolts*).

Step 4 Attach remaining pre-assembled rack side and tighten all bolts.

Step 5 Install casters last.



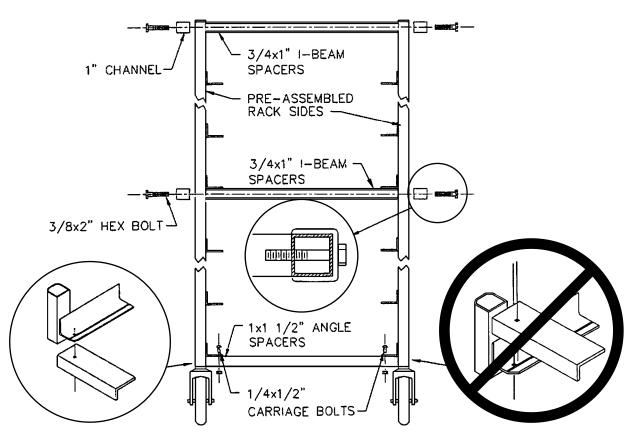

EG9870 Revised 01/24



- 100 Industrial Boulevard, Clayton, Delaware 19938-8903 U.S.A.
- Phone: 302/653-3000 800/441-8440 Fax: 302/653-2065
- www.eaglegrp.com www.eaglemhc.com