


Wire Shelving Display

ASSEMBLY INSTRUCTIONS


CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE. **SAVE YOUR BOX AND ALL PACKING MATERIALS.** YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

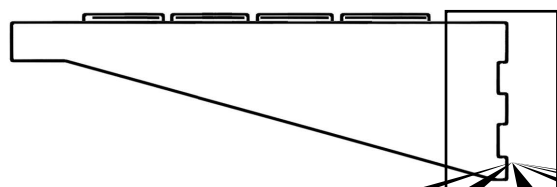


Before assembly:


Please determine the brackets you ordered by matching with one of the images below.

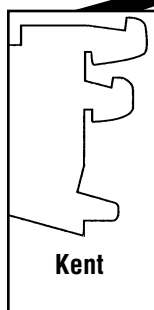


Kent

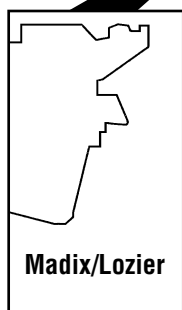


Madix/Lozier

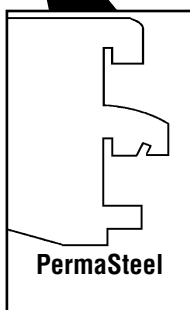


PermaSteel

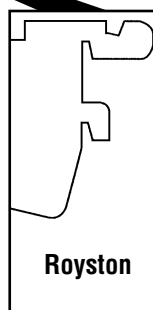

Royston

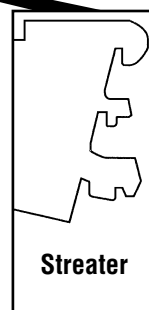

Streater

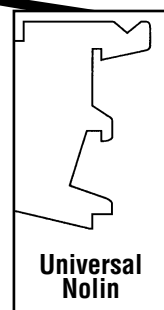

Universal
Nolin

Step 1 - Attach brackets.

Hook each pair of brackets onto gondola at desired height.
(Note: make sure each bracket is at same height on each side.)

Step 2 - Attach shelf.

Attach display shelf onto each pair of brackets.

