


Bumper Guard Rail

ASSEMBLY INSTRUCTIONS

CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE. **SAVE YOUR BOX AND ALL PACKING MATERIALS.** YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

Thank you for your purchase. Before assembly, READ THIS INSTRUCTION SHEET CAREFULLY. After reading, be sure to store this instruction in a safe place, should it be needed for future reference.

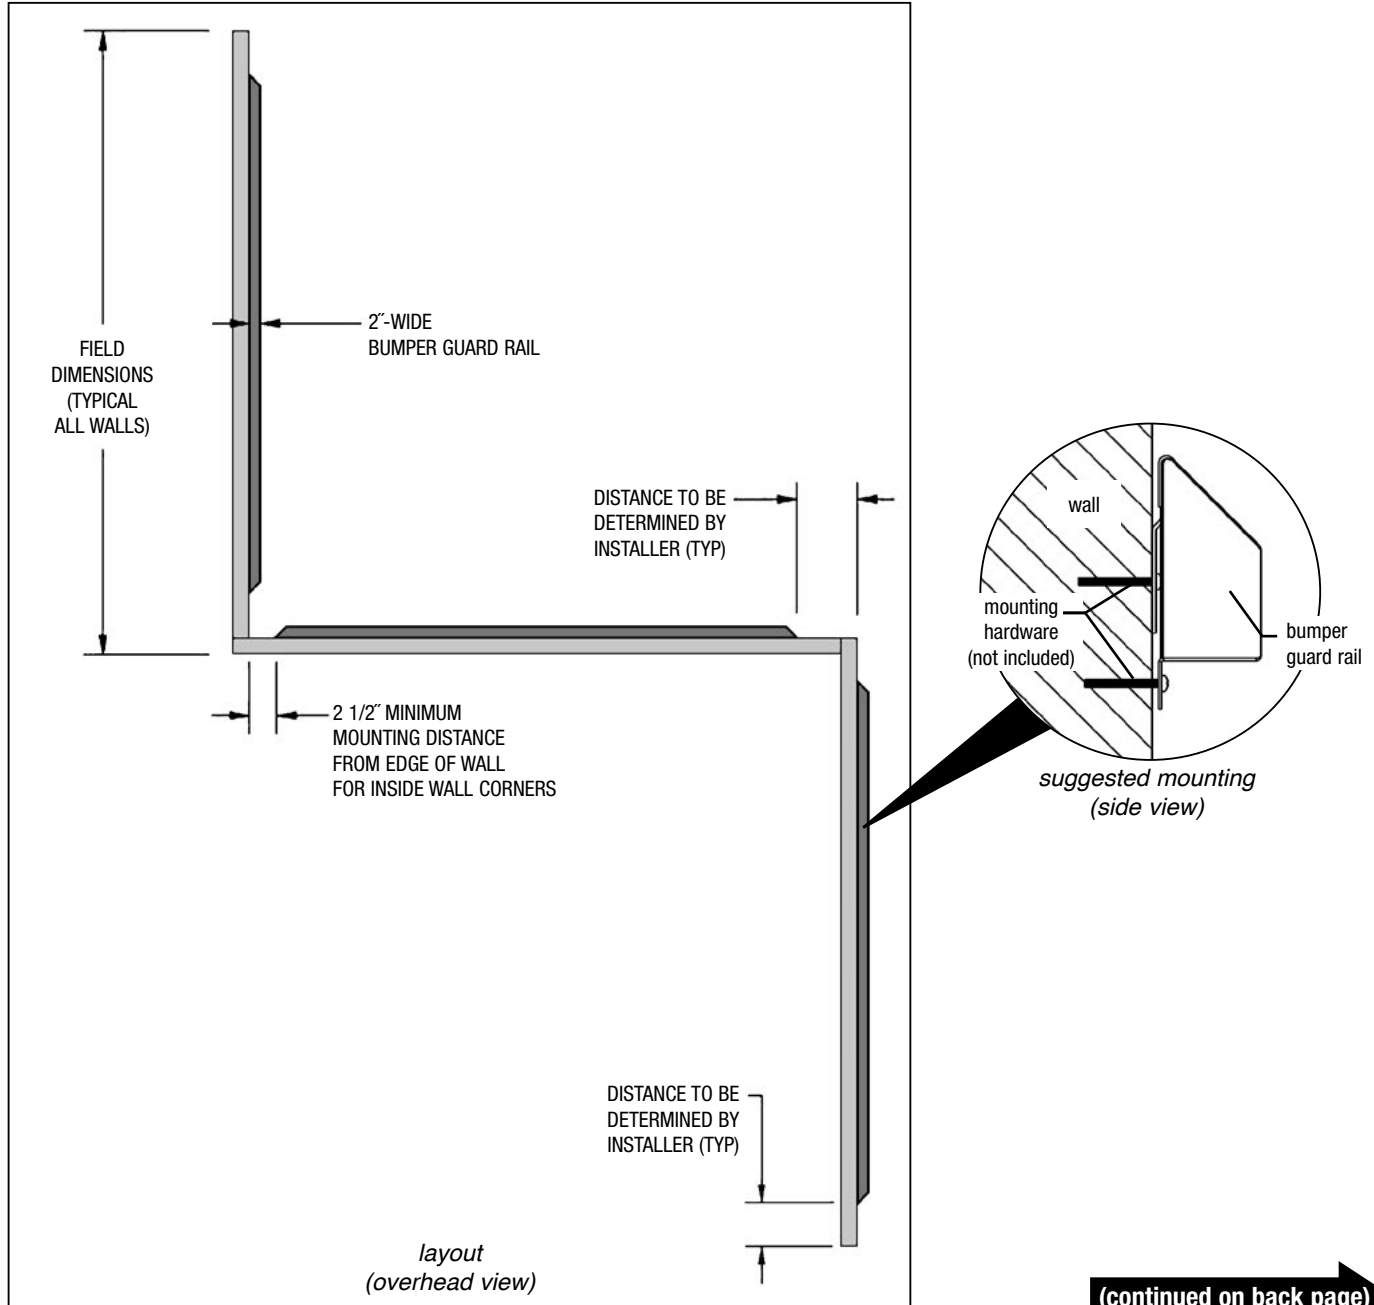

(continued on back page) →

EG10125 Revised 09/24



• 100 Industrial Boulevard, Clayton, Delaware 19938-8903 U.S.A.
• Phone: 302/653-3000 • 800/441-8440 • Fax: 302/653-2065
• www.eaglegrp.com • www.eaglemhc.com

Bumper Guard Rail


ASSEMBLY INSTRUCTIONS

Step 1 - Preparation.

- Prior to installation, clean substrate to remove dust, debris and loose particles. Wall surface must be dry and free from dirt, grease and loose paint.
- Gather the tools necessary: a drill/driver, measuring tape, and writing utensil to mark the wall.

Step 2 - Mark the wall.


- Mark a horizontal line 3.5" below the desired height for the wall bumper. This will indicate the bottom of the Z-clip.
- For example: If the desired height of the bumper is 36", mark a line 32.5" high.

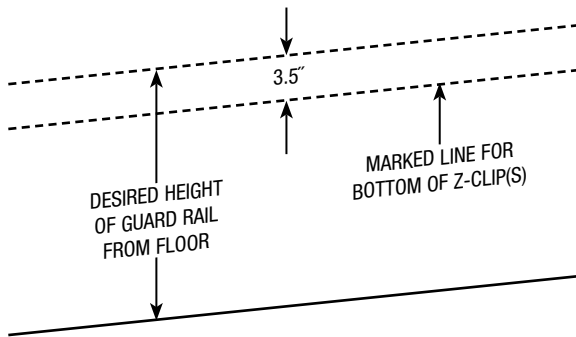

Step 3 - Attach Z-Clip(s).


Note: Position Z-clip so that the holes are closer to floor. If more than one Z-clip is to be used, the distance between Z-clip centers should be the length of the bumper guard rail ÷ 3 (see illustration below).

- Place a Z-Clip on the wall with the bottom touching the marked line.
- Mark the location of the holes and the center of the clip on the wall.
- If there the length of the guard rail is greater than 36"...
 - Place the next clip, still level with the marked line.
 - Mark the location of the holes and centers on the wall.
- Set the Z-Clips down, drill into the wall on the hole marked locations.
- Place the clips back using marks as guide.
- Run wall-mounting hardware through the holes on the Z-clips and into the wall.
- Tighten all hardware (not included).

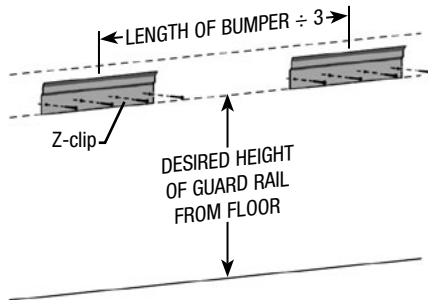

Step 4 - Secure bottom of guard rail to wall.


- Hang the guard rail from the wall with the Z-Clip(s).
- Drill pilot holes through the guard rail holes and into the wall.
- Run wall-mounting hardware (not included) through the hole on the guard rail and into the wall.
- Tighten all hardware.

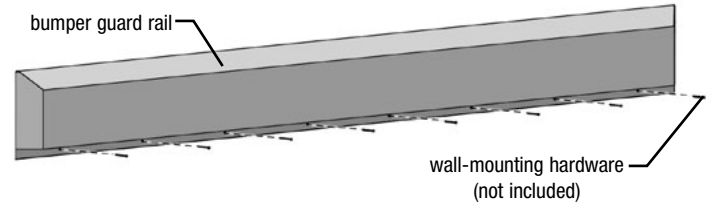

(End) Installation is complete.

CARE AND CLEANING

**CLICK
HERE**  **for full
information
sheet**

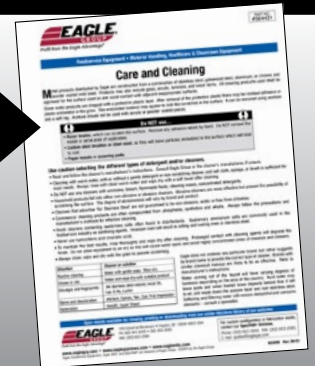

IMPORTANT NOTE:

Wall mounted units must be attached to a properly constructed and sound wall. For walls constructed of wood or steel studs, the mounting points must be directly on the stud or suitable in-wall-grounds of plywood or sheet metal. Eagle Group cannot be held responsible for the failure of the device or any other devices due to improper installation.



- 100 Industrial Boulevard, Clayton, Delaware 19938-8903 U.S.A.
- Phone: 302/653-3000 • 800/441-8440 • Fax: 302/653-2065
- www.eaglegrp.com • www.eaglehmc.com