Hand Sink with Wall Brackets

ASSEMBLY INSTRUCTIONS

For Narrow Hand Sink with Wall Brackets, see next page.

CAUTION


INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING
CARRIER FOR ANY DAMAGE. **SAVE YOUR BOX AND ALL PACKING MATERIALS.**YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

Please note <u>before</u> assembly:

Remove the locking nuts from underside of hand sink and set aside.


Step 1 - Assemble wall brackets to sink.

- Align holes on top of bracket with threaded studs underneath sink, and assemble.
- Fasten with nuts provided.
- · Repeat on remaining side of sink.

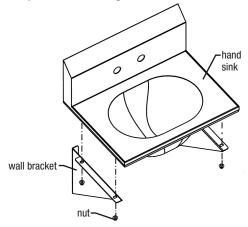


Step 2 - Mount z-bracket to wall.

Use a level for straightness. (Note: Mounting hardware not included.)

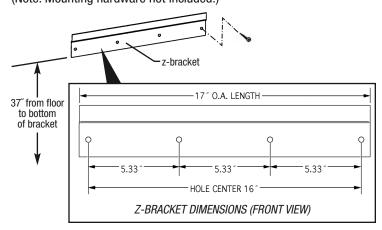


Step 3 - Hang sink off z-bracket.

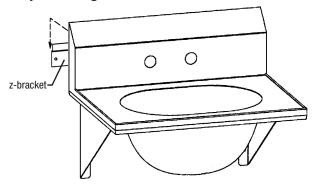

Step 4 - Secure wall brackets to wall.

(Note: Mounting hardware not included.)

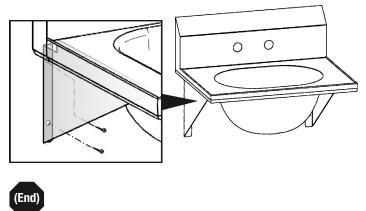

EG9945 Revised 01/24



- 100 Industrial Boulevard, Clayton, Delaware 19938-8903 U.S.A.
- Phone: 302/653-3000 800/441-8440 Fax: 302/653-2065
- www.eaglegrp.com www.eaglemhc.com

Narrow Hand Sink with Wall Brackets

ASSEMBLY INSTRUCTIONS

For Hand Sink with Wall Brackets, see previous page.

CAUTION


INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING
CARRIER FOR ANY DAMAGE. **SAVE YOUR BOX AND ALL PACKING MATERIALS.**YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

Please note <u>before</u> assembly:

Remove the locking nuts from underside of hand sink and set aside.

Step 1 - Assemble wall brackets to sink.


- Align holes on top of bracket with threaded studs underneath sink, and assemble.
- Fasten with nuts provided.
- · Repeat on remaining side of sink.

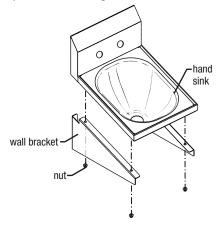


Step 2 - Mount z-bracket to wall.

Use a level for straightness.


(Note: Mounting hardware not included.)

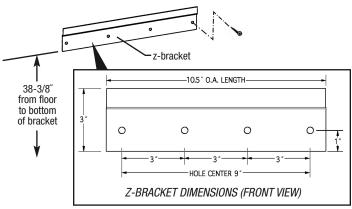

Step 3 - Hang sink off z-bracket.

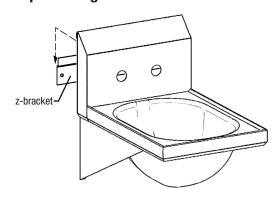

Step 4 - Secure wall brackets to wall.

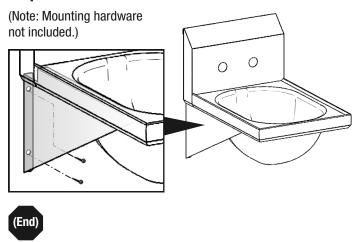



- 100 Industrial Boulevard, Clayton, Delaware 19938-8903 U.S.A.
- Phone: 302/653-3000 800/441-8440 Fax: 302/653-2065
- www.eaglegrp.com www.eaglemhc.com