


# Mobile Mixer Stand

## ASSEMBLY INSTRUCTIONS


### CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE.  
**SAVE YOUR BOX AND ALL PACKING MATERIALS.**  
YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

### Parts List

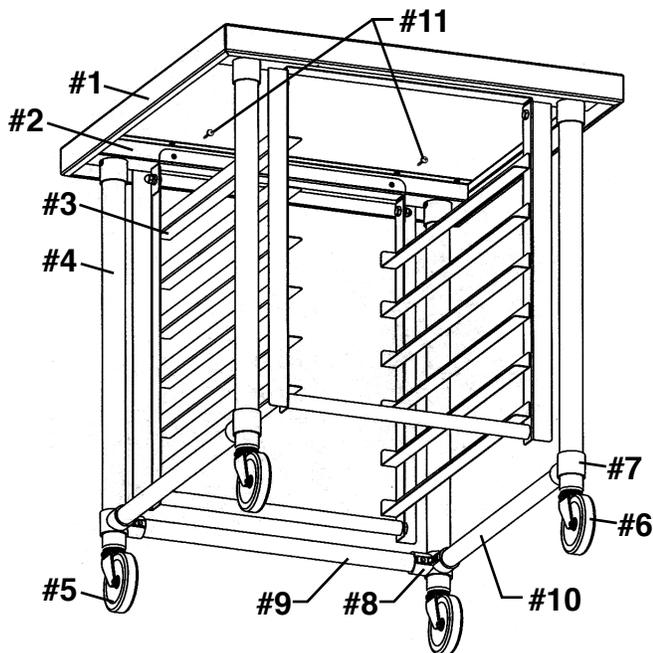

#	qty	part	description
#1	1	330126	Table Top
#2	2	348345	Leg Channel
#3	1	315463	Tray Slide Rack
#4	4	315461	Leg
#5	2	300699	Caster
#6	2	300698	Caster with Brake
#7	2	317646	Front Fitting
#8	2	317647	Corner Fitting
#9	1	317663	Side-to-side Crossbrace
#10	2	317643	Front-to-back Crossbrace
#11	6	300794	#8 x 1/2" Screw
#12	4	377798	1/8" - 16 x 1/2" Hex Cap Screw
#13	4	305010	Flat Washer
#14	4	306122	Lock Washer
#15	4	306137	Cap Nut
#16	4	300962	1/2" - 13 x 1 1/2" Bolt
#17	4	311243	5/16" - 24 Set Screw

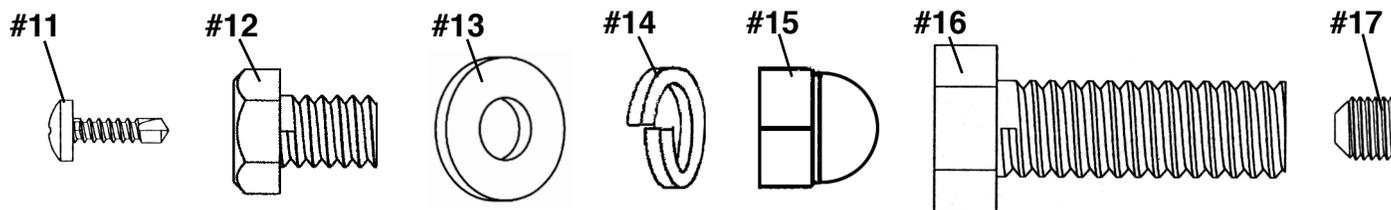




(actual size of hardware)

(continued on page 2)

# Mobile Mixer Stand



## ASSEMBLY INSTRUCTIONS

### Step 1 - Assemble rack (Item #3) and set aside.

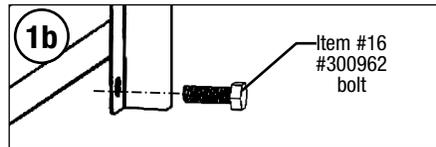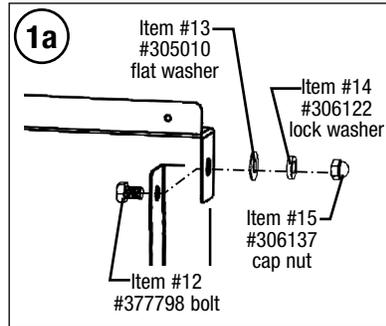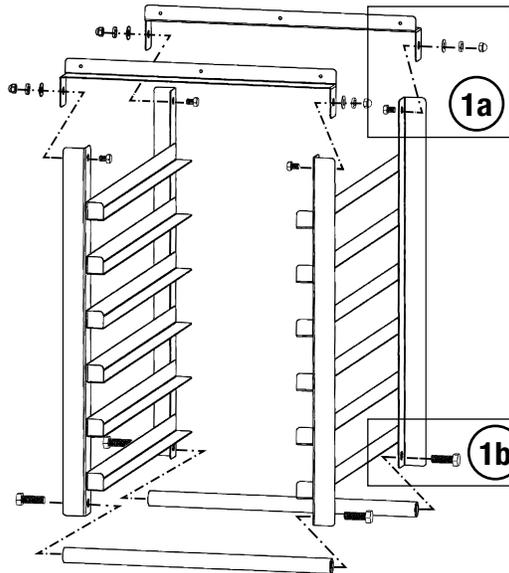


### Step 2 - Assemble crossbrace subassembly.

- Loosen Item #17 set screws\* in Items #7 and #8 castings.
- Assemble castings to Items #9 and #10 crossbracing, as shown.
- With 5/32" allen wrench, tighten set screws\* in the appropriate threaded hole in castings (see below).

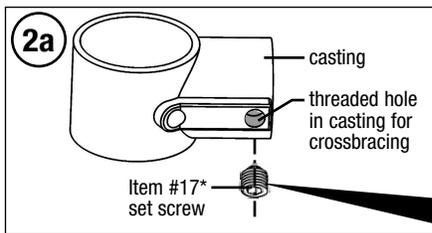
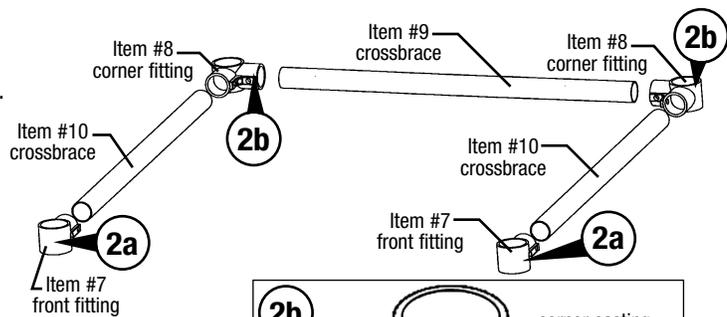


**\* To meet NSF standards:**  
Set screws must be filled  
with NSF-approved sealant.

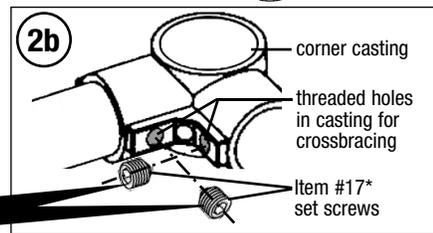


### Step 3 - Slide legs through crossbrace subassembly and snug set screws\*.

- Loosen Item #17 set screws\* in Items #7 and #8 castings of crossbrace subassembly.
- Insert legs through castings. Position legs so that approximately 1" of each leg protrudes through each casting.
- With 5/32" allen wrench, tighten set screws\* in the appropriate threaded hole in castings (see below).

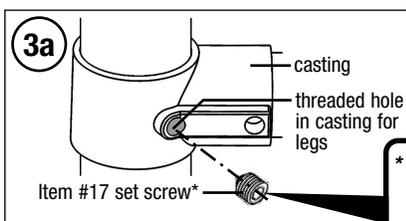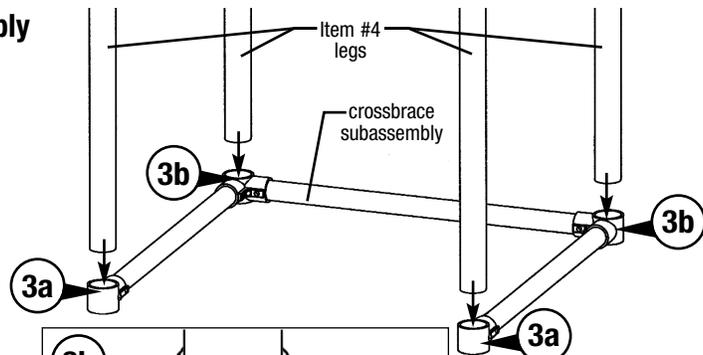

**\* To meet NSF standards:**  
Set screws must be filled  
with NSF-approved sealant.

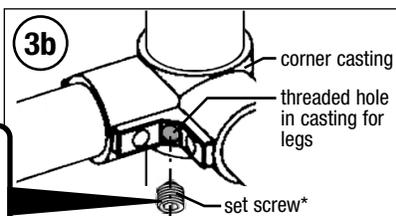

(continued on page 3)



