
Demo Tables

ASSEMBLY INSTRUCTIONS


CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE. **SAVE YOUR BOX AND ALL PACKING MATERIALS.**YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

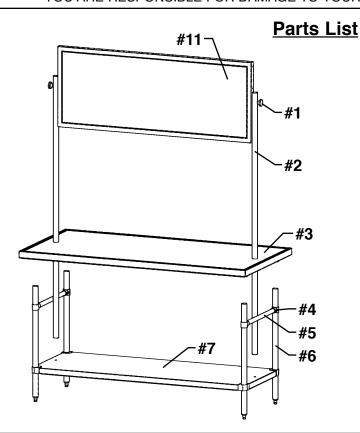

<u>ite</u>	<u>m #</u>	<u>qty</u>	part #	<u>description</u>
_	#1	2	332094	3/8 - 16 x 3" hand knob
	#2	2	YTR10231-02	78 3/8" leg
	#3	1	*	tabletop
	#4	4	317646	crossbrace fitting
	#5	2	317643	crossbrace tubing
	#6	4	300317	33" leg
	#7	1	*	undershelf
	#8	2	304143	1/2 - 13 x 2 1/2" hexcap bolt
	#9	4	311243	5/16 - 24 set screw
	#10	4	305010	3/8" washer
	#11	1	*	mirror

^{*} Part number varies by length of table ordered.

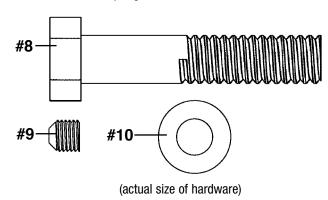


Before assembly: This will be a two-person assembly. Do <u>NOT</u> try to assemble alone.

Step 1 - Assemble 33" legs to undershelf.

• Be sure undershelf is level.

• Recommended height from the floor to the top of the undershelf is 10".

NOTE: Locking bolt found inside each casting. Do not overtighten castings or failure will occur. Use 1/2" allen wrench (not shown).

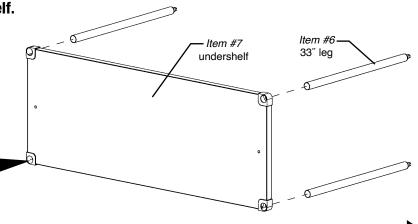

EG9969 Revised 12/23

(continued on back page)




- 100 Industrial Boulevard, Clayton, Delaware 19938-8903 U.S.A.
- Phone: 302/653-3000 800/441-8440 Fax: 302/653-2065
- www.eaglegrp.com www.eaglemhc.com


Demo Tables

ASSEMBLY INSTRUCTIONS


Step 2 - Assemble crossbrace tubing and crossbrace fittings.

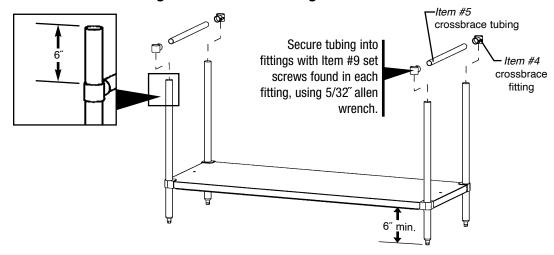


Step 3 - Assemble top. Set upright.

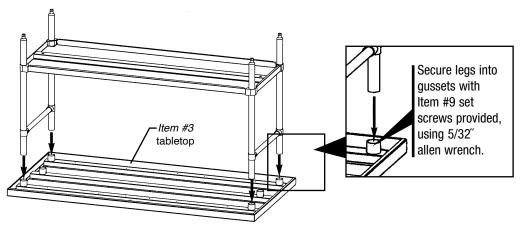

Step 4 - Assemble mirror to 78%" legs.

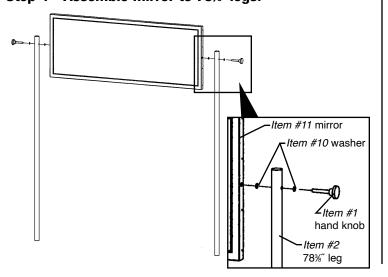

Step 5 - Attach mirror sub-assembly to table.

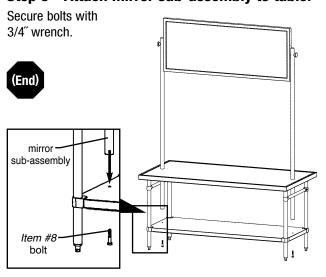



- 100 Industrial Boulevard, Clayton, Delaware 19938-8903 U.S.A.
- Phone: 302/653-3000 800/441-8440 Fax: 302/653-2065
- www.eaglegrp.com www.eaglemhc.com