
INSTRUCTION SHEET #346308

Drop-In Ice Chests


ASSEMBLY INSTRUCTIONS

CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE. **SAVE YOUR BOX AND ALL PACKING MATERIALS.** YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

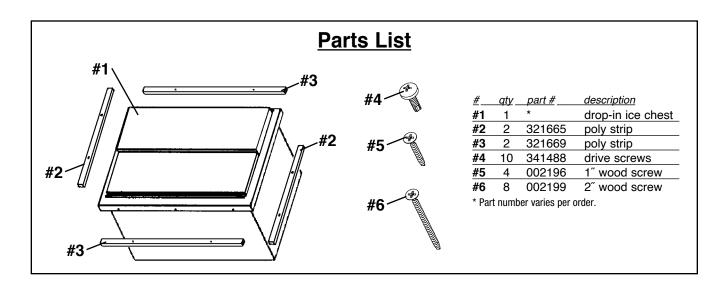

Step 1 - Position poly strips around the cutout.

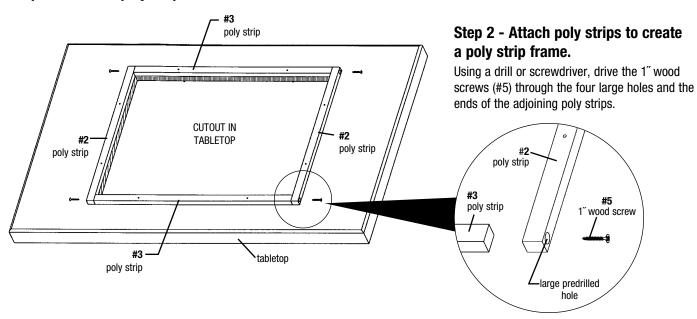



EG10013 Revised 08/23




- 100 Industrial Boulevard, Clayton, Delaware 19938-8903 U.S.A.
- Phone: 302/653-3000 800/441-8440
- Fax: 302/653-2065 www.eaglegrp.com

Drop-In Ice Chests

ASSEMBLY INSTRUCTIONS




Using a drill or screwdriver, drive the 2" wood screws (#6) down into the predrilled small holes of the poly strips and into the tabletop.

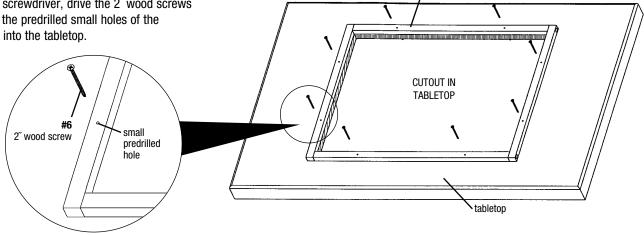

poly strip frame

Step 4 - Lower drop-in ice chest into cutout.

Top panel flanges of the drop-in ice chest should cover the poly strip frame on all four sides.

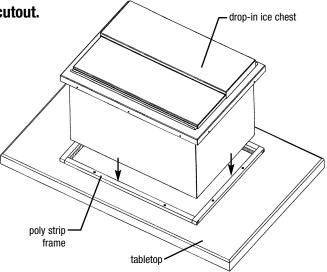


Step 5 - Mount drop-in ice chest to poly strip frame.

Using a drill or screwdriver, screw the drive screws (#4) into the prepunched holes of the top panel flanges and into the poly strips. Note: Install all 10 drive screws to insure

that the unit is secure.



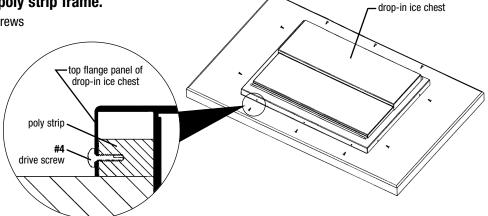



- 100 Industrial Boulevard, Clayton, Delaware 19938-8903 U.S.A.
- Phone: 302/653-3000 800/441-8440
- Fax: 302/653-2065 www.eaglegrp.com